

erect outer first

1. Remove contents from the tent bag and identify each item.
2. Assemble poles and lay them on the ground. Once assembled you should have 4 sets of poles.
3. Lay the flysheet on the ground and position in the desired location and direction. Please take care to ensure that the ground is free from objects that may damage the groundsheet.
4. Peg the back of the tent in place.
(Please note: in windy conditions, peg the back of the tent into the wind. This will keep the flysheet facing in its intended direction)
5. Thread all of the poles into the relevant pole sleeve. Each of the pole sleeves has a coloured identifier at the entry to each pole sleeve that matches with the relevant pole end.
6. One person should now enter the tent by unzipping the front door and lift the centre of the tent. At the same time the second person should locate the bottom of each pole and place it into the corresponding pin. You will find the metal pin attached to a ring on the base of the flysheet.
(N.B. Following the seam line down from where the pole exited from the pole sleeve will help you locate the relevant ring & pin at the base of the flysheet)
7. Re-visit each of the secured pole ends. You will notice attached to each of them is a black strap with an adjustable buckle. Ensure that all the straps at the pole ends are tightened. This is achieved by pulling the strap towards the ground. It should naturally pull the base of the pole nearer to the groundsheet of the tent.
8. Once all the tension straps at the base of the poles are fastened, secure them in place by pegging through the metal ring. Move around the outside of the tent and peg out all the remaining pegging points. Please ensure that all the panels are taut and the tent sits evenly by looking inside the tent when finished.
9. Peg out all guy lines. Guy lines should pull in line with the seam or pole that they originate from. They should also be tensioned so that they are taut but do not pull the tent fabric from its natural path.
10. Spread the inner tent on the ground to identify where the doors are positioned. Pull the inner into the tent and starting from the back, fasten the inner into position.
11. After use, ensure both inner and outer tents are clean and dry before packing away. Brushing or gently washing with luke warm water will remove any dirt or stains. Never use detergents as these can affect the waterproofing of the tent. Store in a cool dry place.


contents

flysheet	Guy lines attached
inner tent	1 inner tent bedroom
pole bag	4 fibre glass poles
peg bag	Steel pegs
repair kit	Fabric patches, seam sealant, spare toggle and shock cord

condensation

Condensation in a tent is caused by moisture in the atmosphere, respiration and perspiration by the occupants. The moisture in the air comes into contact with the colder fabric and framework and condenses into water droplets. This is not to be confused with the tent leaking. On the contrary, the problem is caused by water trying to get out of the tent rather than trying to leak in! Taking the following precautions can reduce condensation:-

- 1: Make sure there is adequate ventilation
- 2: Do not cook inside the tent
- 3: Where possible avoid storing wet/damp clothing or equipment inside the tent.
- 4: Always take the opportunity to air sleeping bags when the sun is out, as sleeping bags tend to store moisture from the user.

fire retardant

Although this Sprayway tent is treated with a **fire** retardant solution it is advised that you do not to cook or use naked flames within your tent.